



# KOMODA

## 150

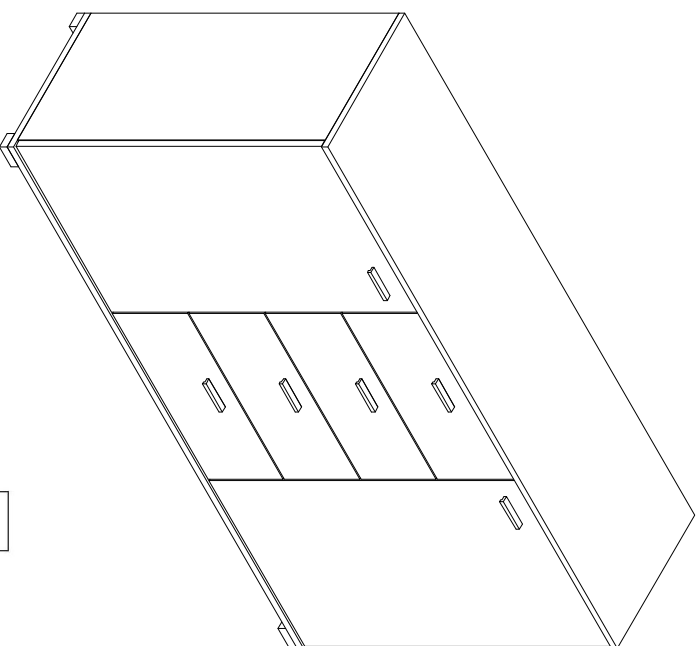


6.6.2017

- D** Montageanleitung
- FR** Notice de montage
- NL** Handleiding voor de montage
- CZ** Montážní návod
- HU** Szerelési útmutató
- TR** Montaj talimatı
- GB** Assembly Instructions
- IT** Istruzioni di montaggio
- PL** Instrukcja montażu
- SK** Návod na montáž
- RO** Instrucțiunile de montaj
- RU** Инструкции по монтажу


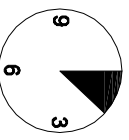


20 min.




1

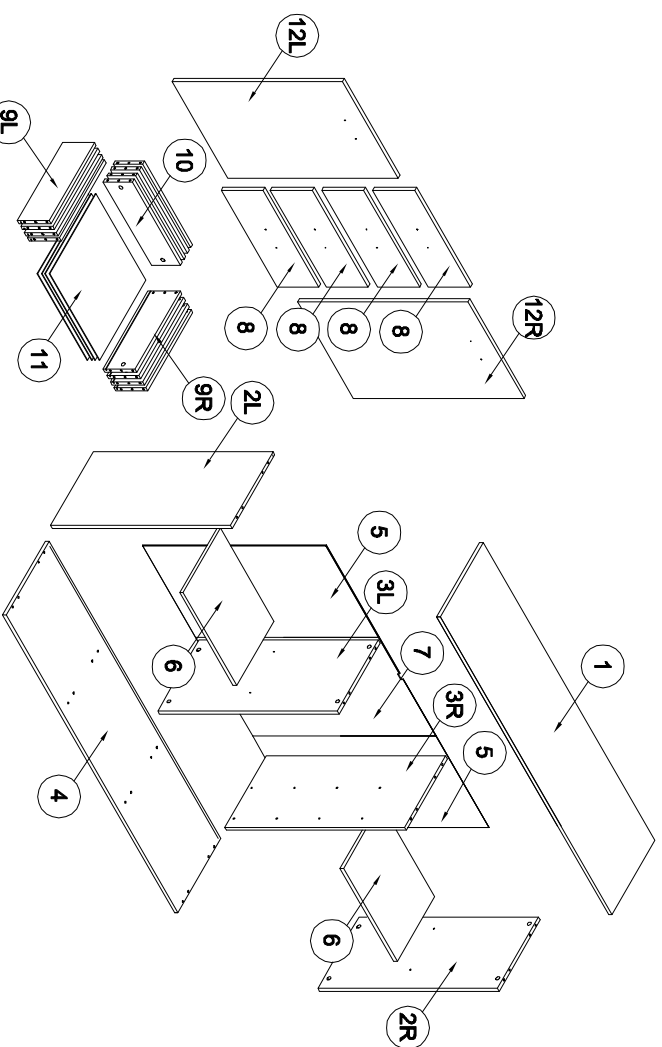




<b>ZC</b> x10	<b>Y</b> x6	<b>W</b> x6	<b>YA</b> x12	<b>TB</b> x1	<b>TA</b> x1	<b>C</b> x32	<b>Z</b> x32
<b>B</b> x32	<b>A</b> x48	<b>RPS</b> x4	<b>RC</b> x4	<b>PC</b> x4	<b>NA</b> x9	<b>ND</b> x24	<b>Z</b> x8
<b>ZC</b> x10	<b>Y</b> x6	<b>W</b> x6	<b>YA</b> x12	<b>PC</b> x4	<b>NA</b> x9	<b>ND</b> x24	<b>Z</b> x8
<b>B</b> x32	<b>A</b> x48	<b>RPS</b> x4	<b>RC</b> x4	<b>H</b> x8	<b>NB</b> x24	<b>N</b> x26	<b>X</b> x10

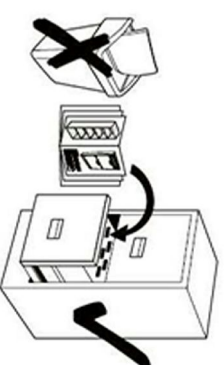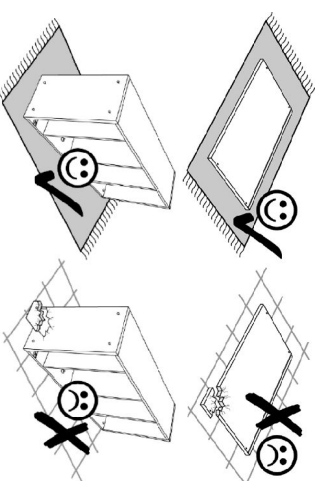



2

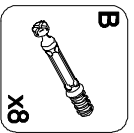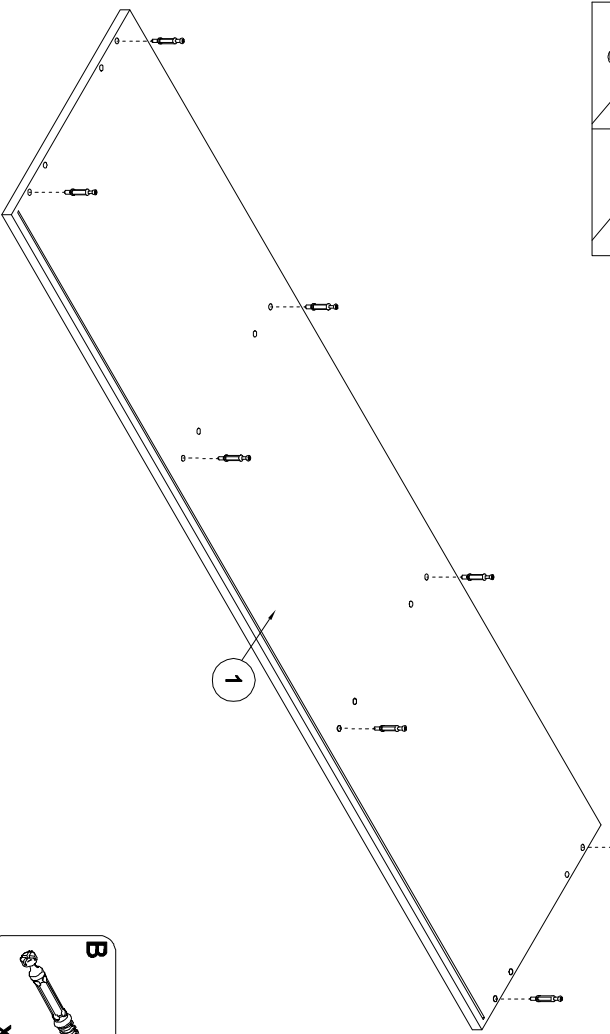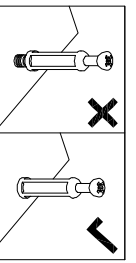


3

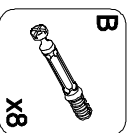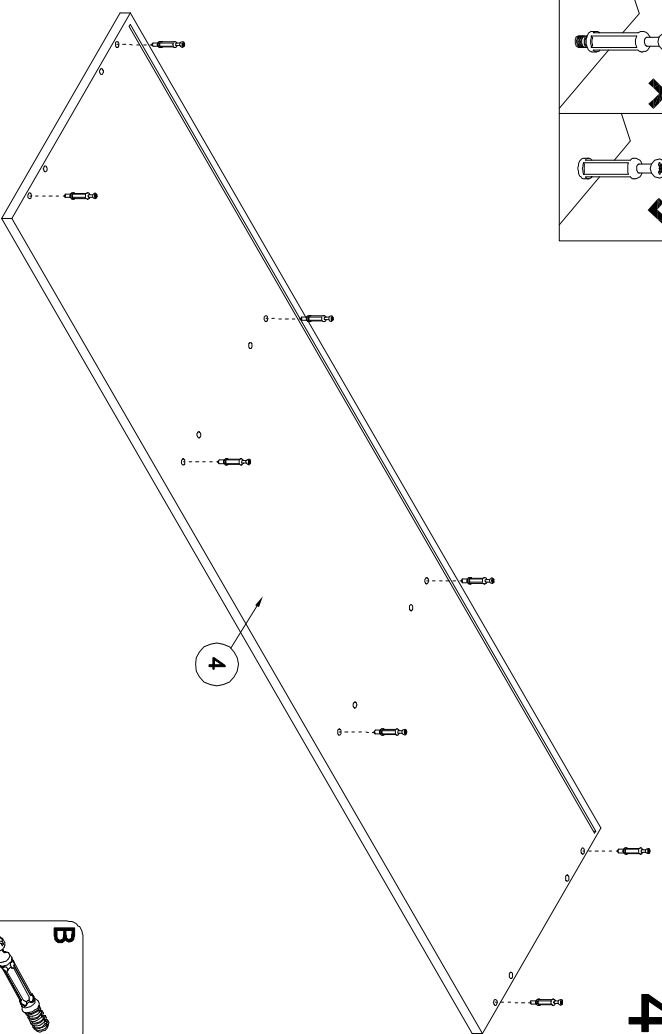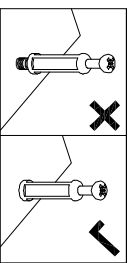

4


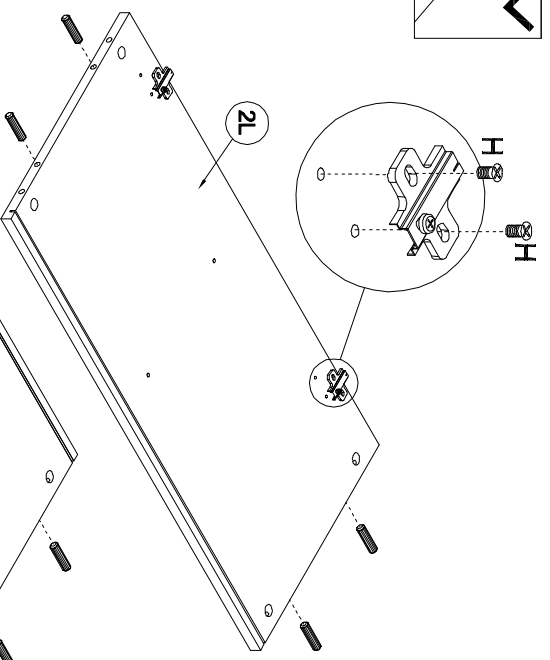
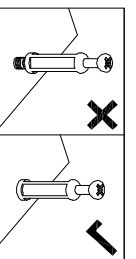


- NB** 3,5x13 x24
- RPS** x4
- A** 8x32 x4
- RC** x16
- H** 6,5x13 x4



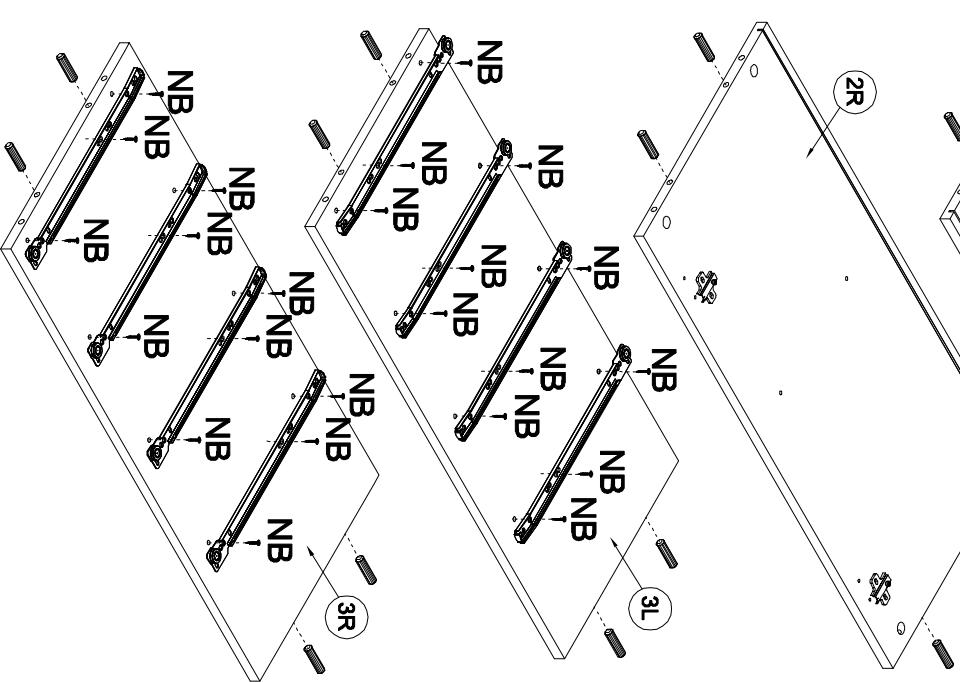


5



6

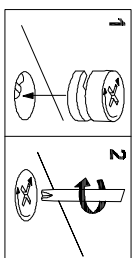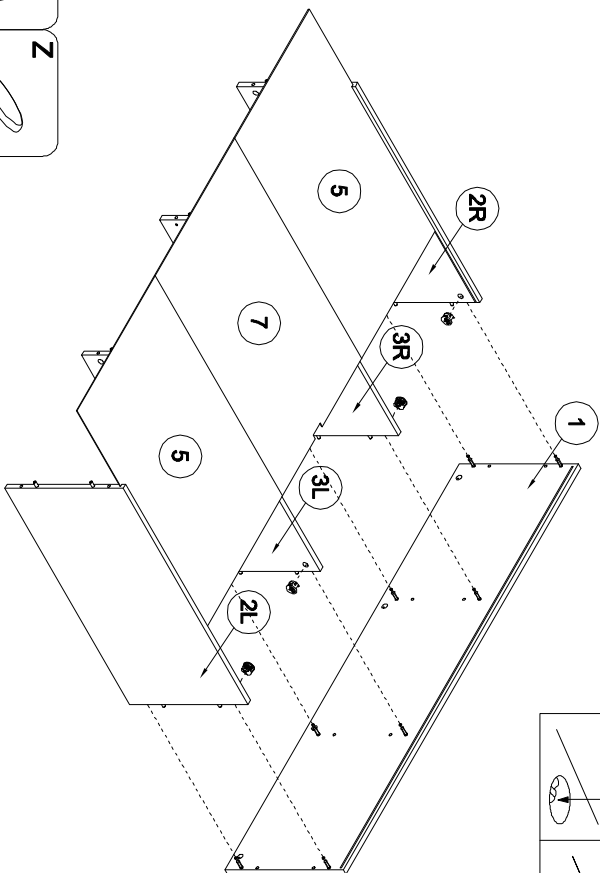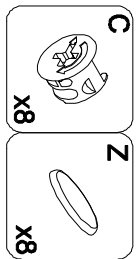



8

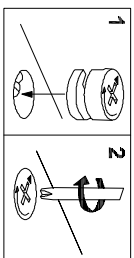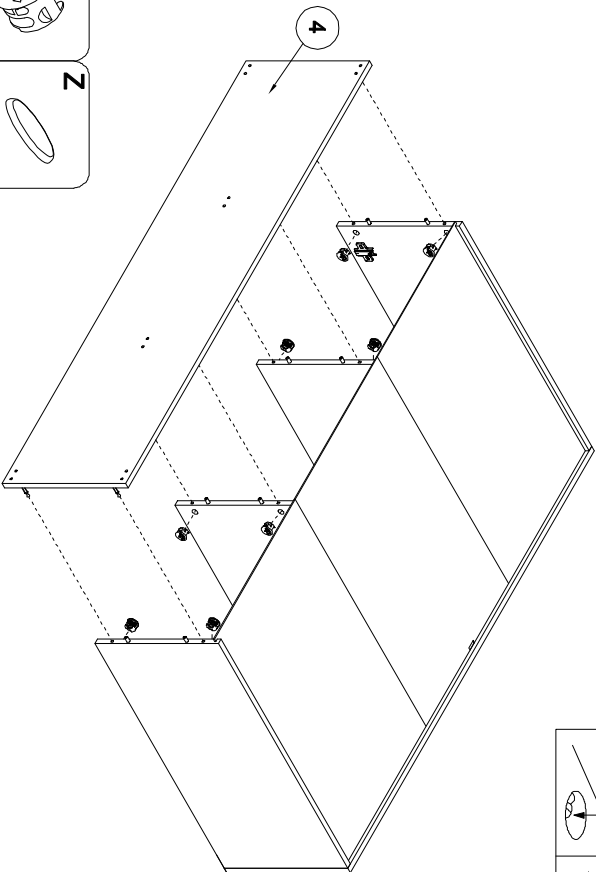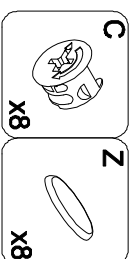





7

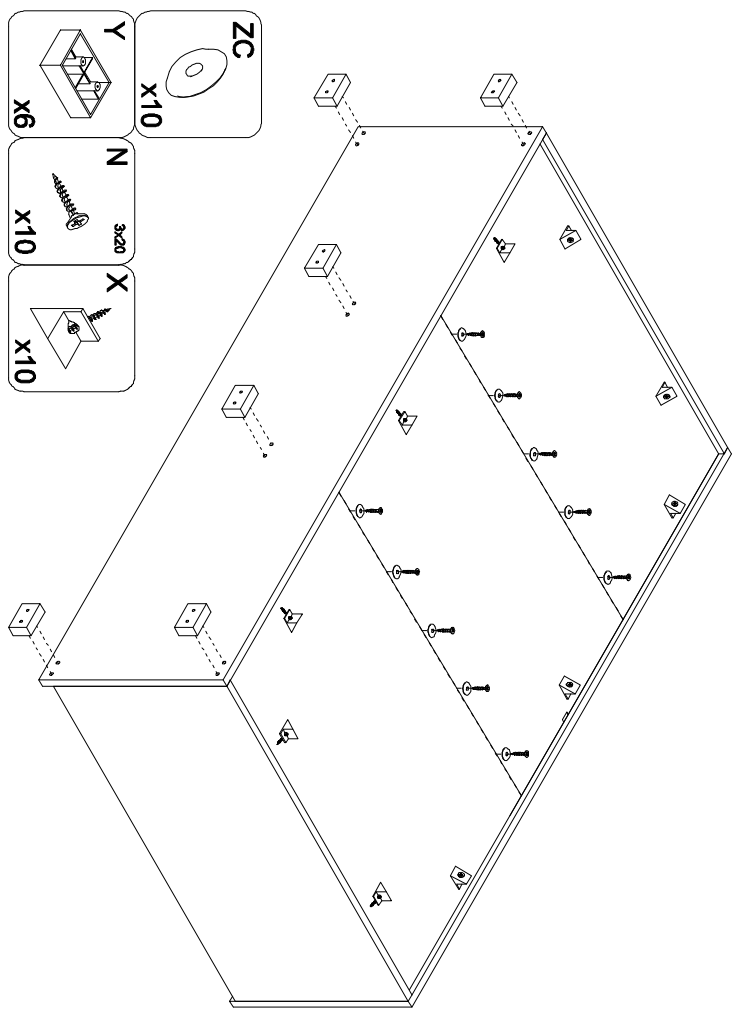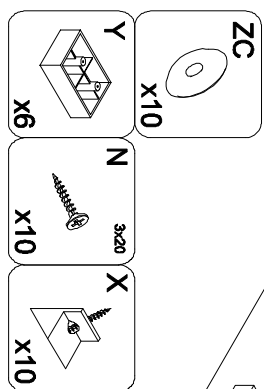


9

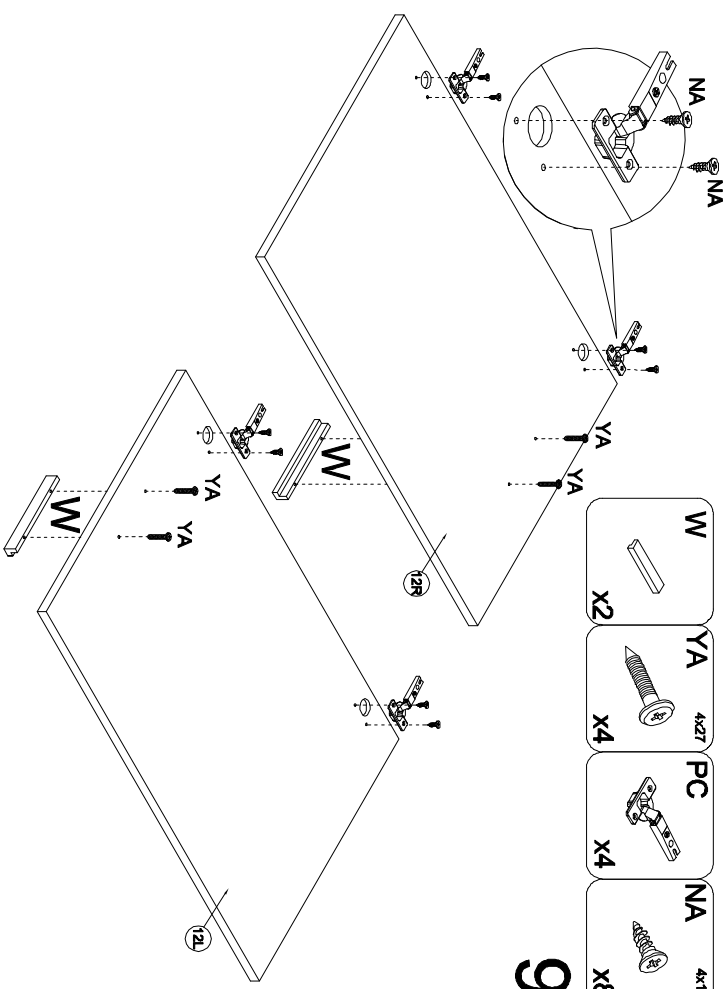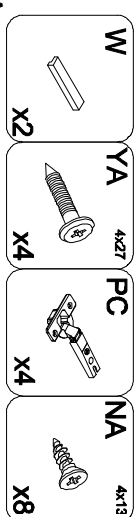




10

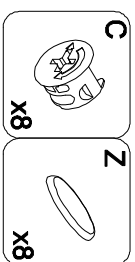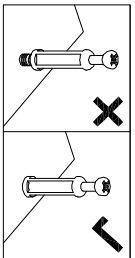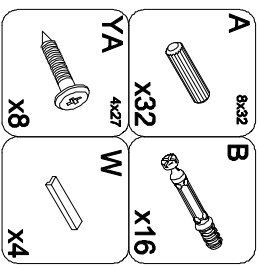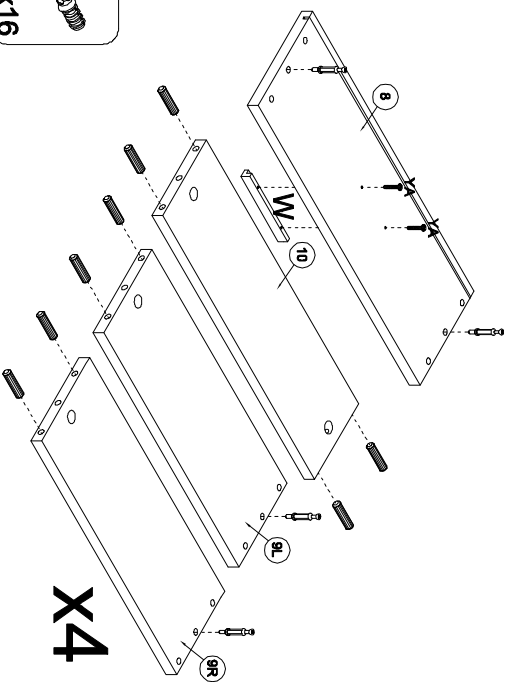



11

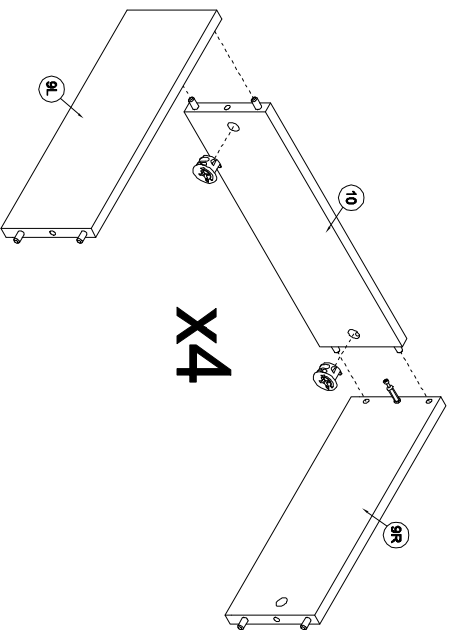


12

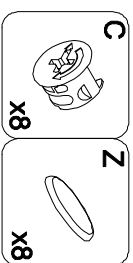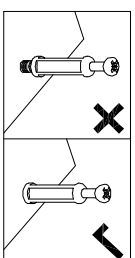
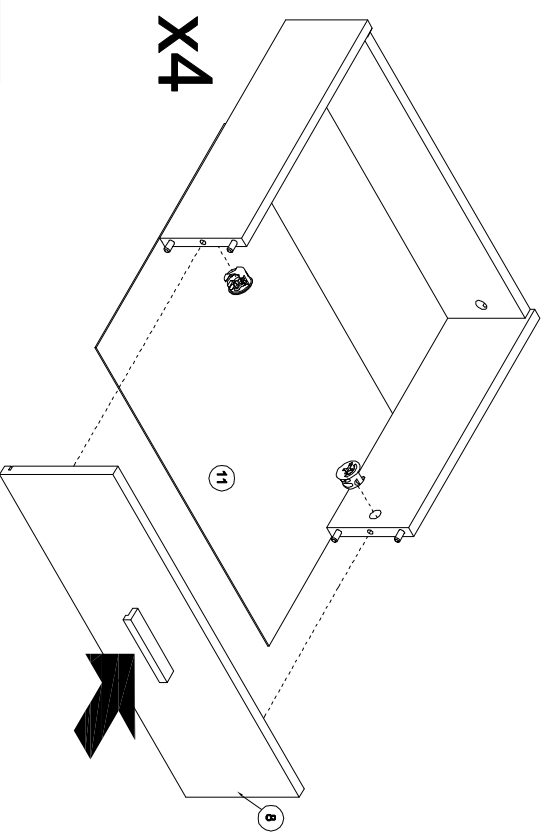


13

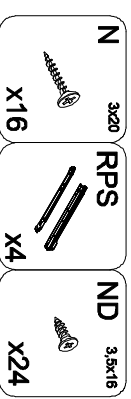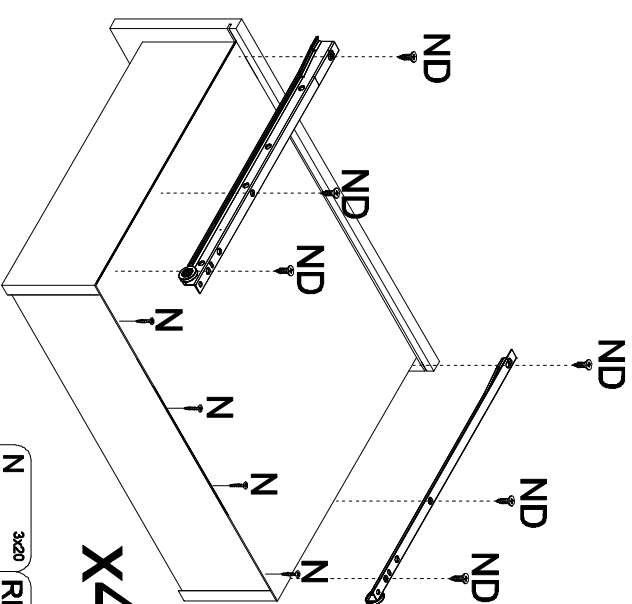

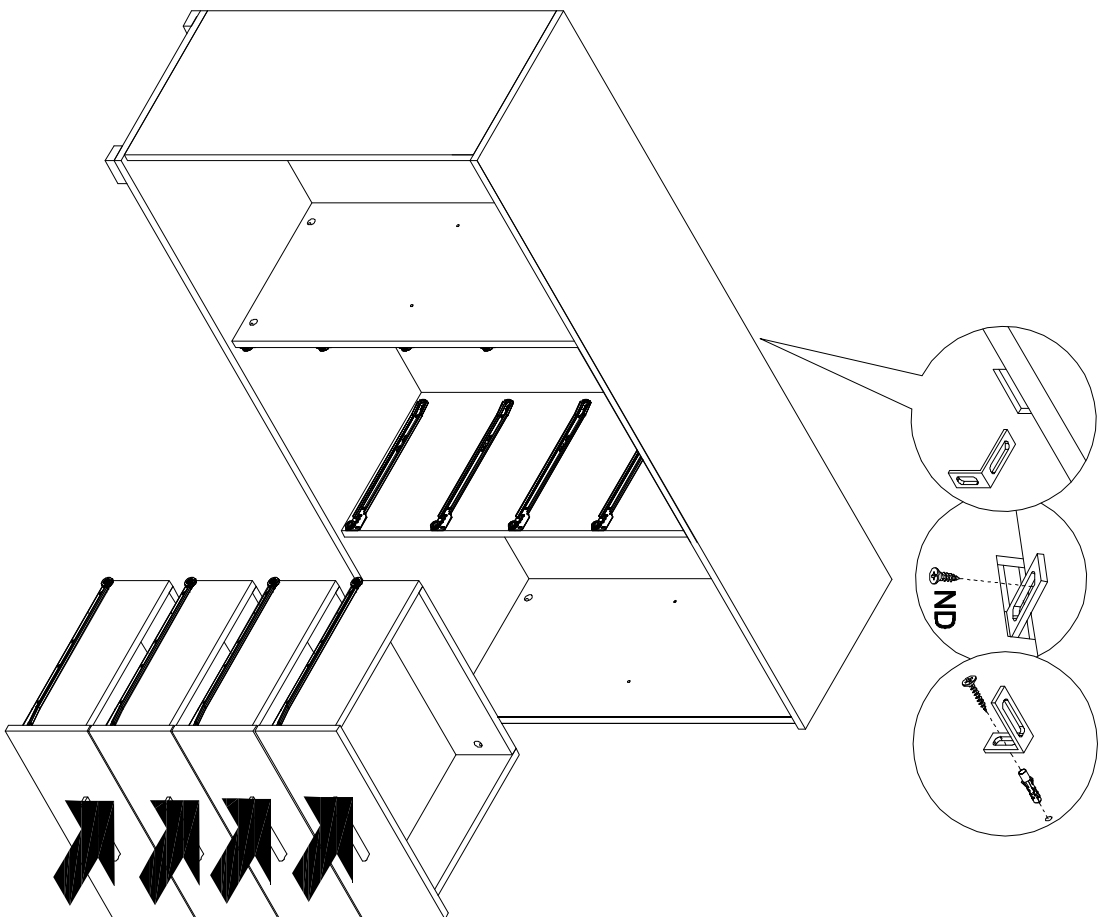

- TB X1
- TA X1
- NA 4x13 X1

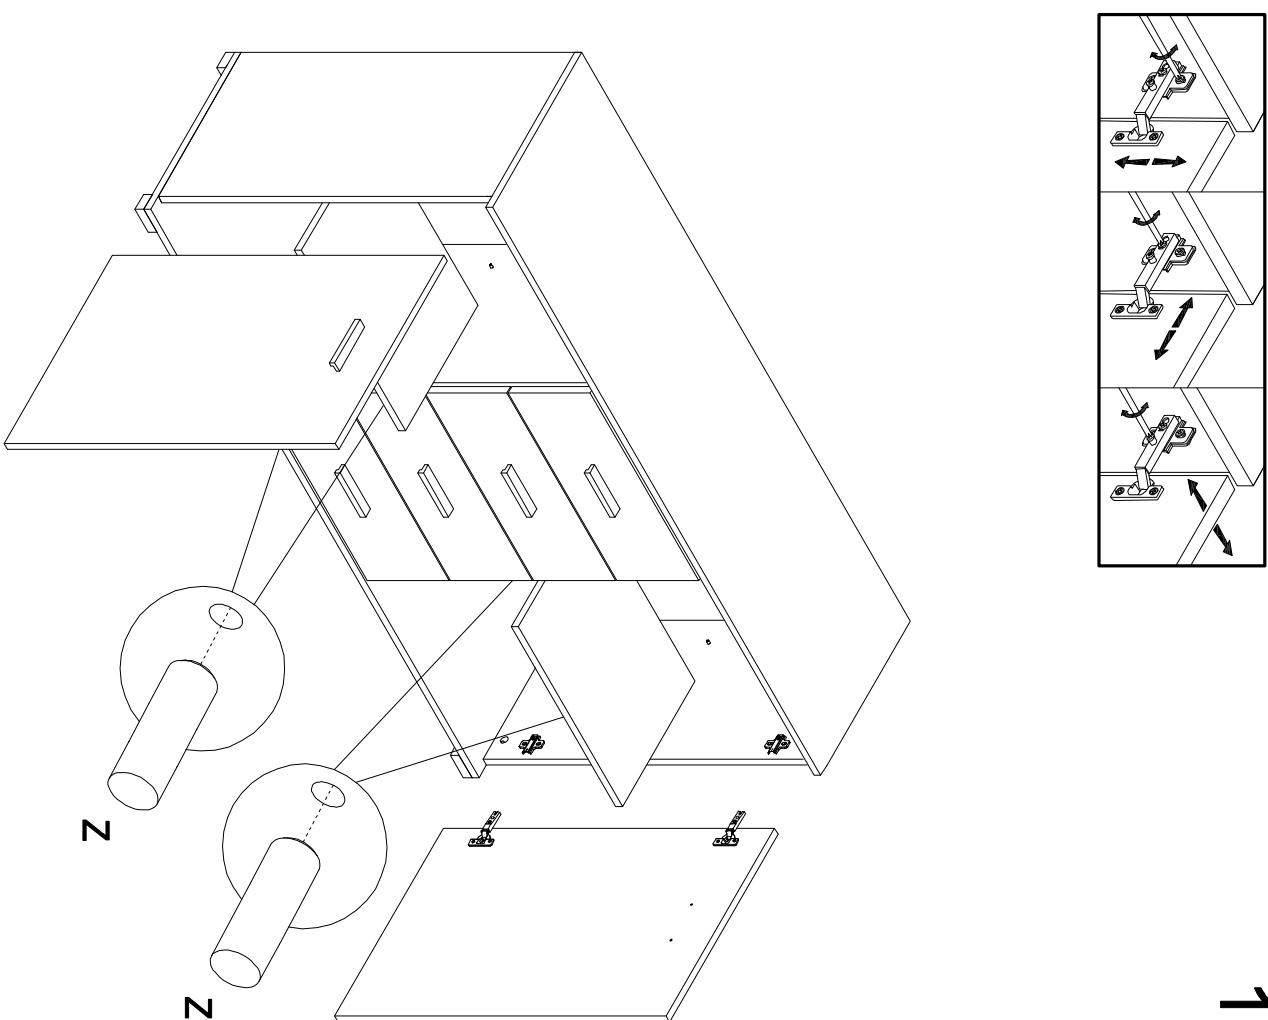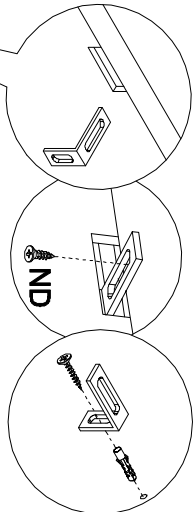

- Z X8

